



Removal

1 Push out lock and pin for handle to unlock engine hood and remove handle.

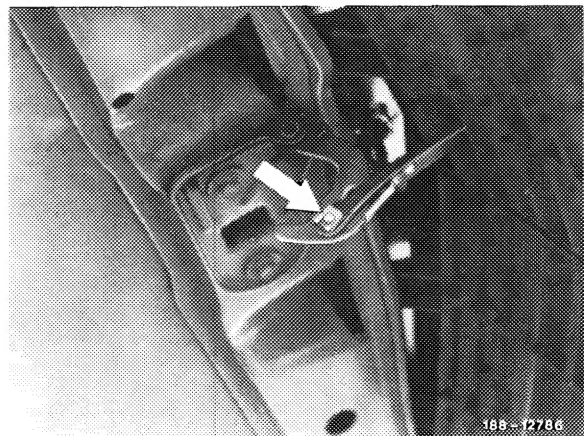

2 Unscrew six fastening screws and remove radiator shell.

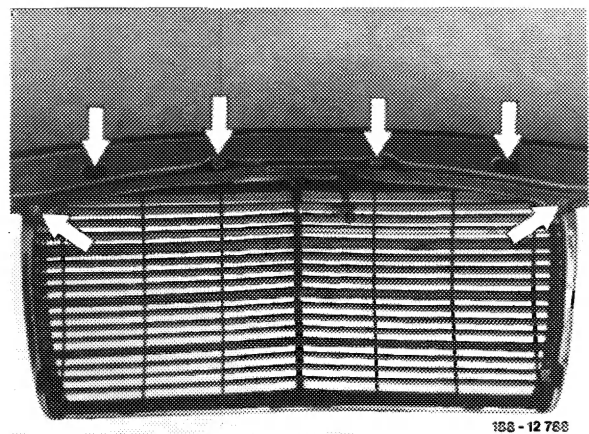

Installation

3 For installation proceed vice versa.

Note: Make sure that shim is glued to radiator shell.